



# Decorating Elves

"MAKE IT A HOLIDAY EVERYDAY!"

[www.decoratingelves.com](http://www.decoratingelves.com)

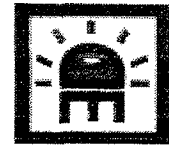

## TRANSFORMER/PHOTOCELL OPERATION

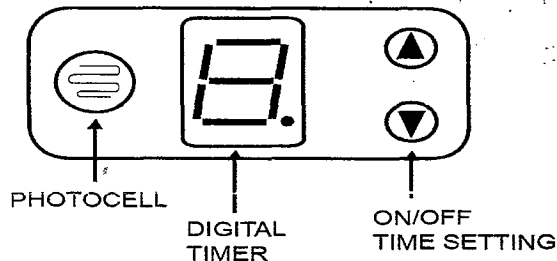

DRAWING 4

This transformer includes a photocell feature that allows light fixtures to operate either manually, on a timer, or automatically. The photocell may take up to 30 seconds to activate upon change in light levels. Pressing the "UP" or "DOWN" arrow keys will cycle through the 11 functions.

**Manual ON** – Pressing "UP" or "DOWN" key until the display shows "O" will cause light fixtures to stay on continuously.

**Manual OFF** – Pressing "UP" or "DOWN" key until the display is blank will turn all light fixtures off.

**Timed Operation (1-9 Hrs.)** – Pressing "UP" or "DOWN" key will cycle through numbers "1-9" (hours). The fixtures will turn on when light levels are low (dusk), and turn off after the indicated amount of time.

**Automatic Operation** – Press "UP" or "DOWN" key until the display reads "A". Light fixtures will turn on when light levels are low (dusk) and turn off when light levels are high (dawn).