


# **INTERMATIC® RAIN TIGHT OUTDOOR TIMER**

**PROGRAM REPEATS EVERY 24 HOURS**  
**TO SET TIMER: (SEE ILLUSTRATION)**

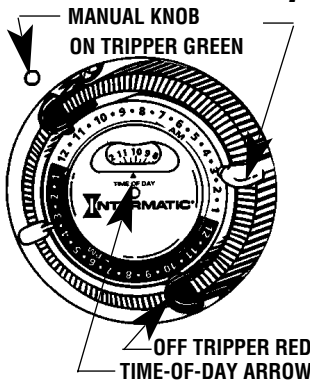

1. Insert **ON (GREEN)** and **OFF (RED)** trippers into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE** → one or more complete revolutions until the arrowhead is aligned with time-of-day (AM or PM) in window.
3. Turn lamp or appliance **ON**.
4. Plug extension cord, lamp or appliance into timers receptacle and plug timer cord into

wall outlet, suitable for "wet locations" if outdoors.

### **FOR EARLY ON OR OFF OPERATION,**

Turn manual knob counter clockwise ← to desired **ON** or **OFF** position, Timer will follow next scheduled automatic operation.

### **IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)**

**WARNING:** To avoid shock hazard, timer must be installed **VERTICALLY** and at least 3 ft. **ABOVE** ground level. **WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER. WHEN USED WITH EXTENSION CORD OR DEVICES DO NOT EXCEED THEIR RATING OR 15 AMPS.**

**MODEL: HB31R      15 AMP (1800 WATT) RESISTIVE; 15 AMP (1800 WATT) TUNGSTEN; 15 FLA (90 LRA) MOTOR-120 VOLT 60 HZ.**

**INTERMATIC INCORPORATED**  
**154SB19358**

